



# DOWNLOAD INSTRUCTION - Xtreme MSR-5830CXCI

## CODE DATA DOWNLOAD (DOWNLOADING MAIN S/W PROGRAM)

1. Connect the Serial Cable (RS232) between Computer and Receiver, and turn on the Receiver.
2. Please run (double click) Downloading Program "FileSend2.exe"
3. "Port Setting" window will be displayed and please select Com Port that is connected with serial cable (ex : com1 or com 2). And Speed " 115.2K " as per default. Other parameters should not be changed.

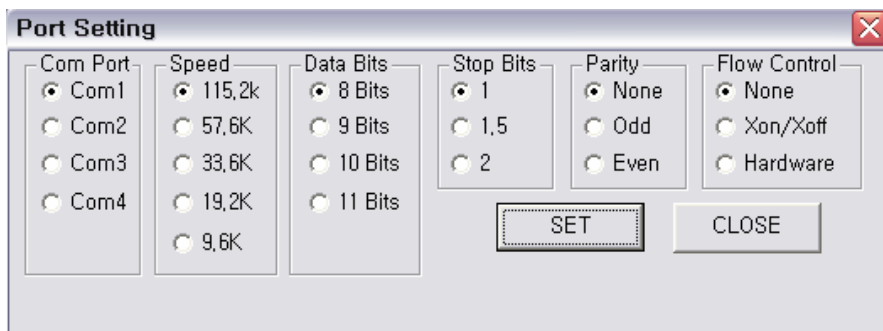

4. Click " SET ".
5. You could see the message of "Code Download" in the top of the window. Click "Open code Data" and select Bin file which contains Model No. you want to upgrade or install, Then Press " Start Send " button to start downloading.

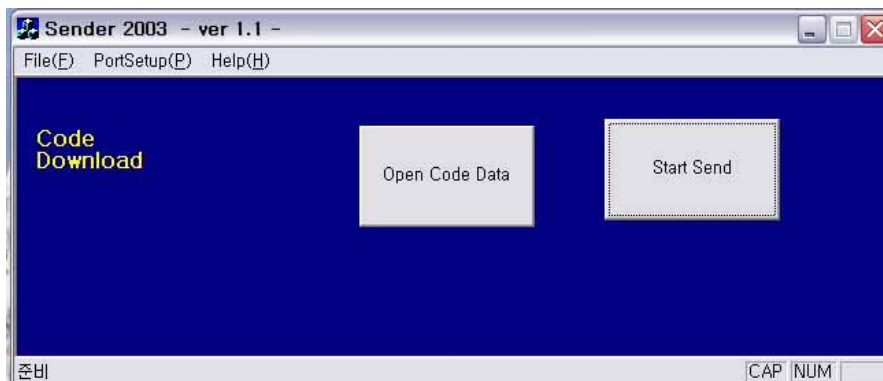

6. If the S/W is successfully installed, you will see the message "Transfer completed" displayed at the bottom of the window and the LED on SVR will be blinking while receiving data from PC.

Note > Please do not turn off the receiver until SVR re-booted automatically after a few seconds.